



GATE OPENING SENSOR


Installation Manual



⚠ WARNING ⚠

When an GATE OPENING SENSOR is in use, the automatic gate opener could be activated by a child on a bicycle, tricycle or other metal play equipment. This product is not recommended for applications exposed to children.

Parts Identification:

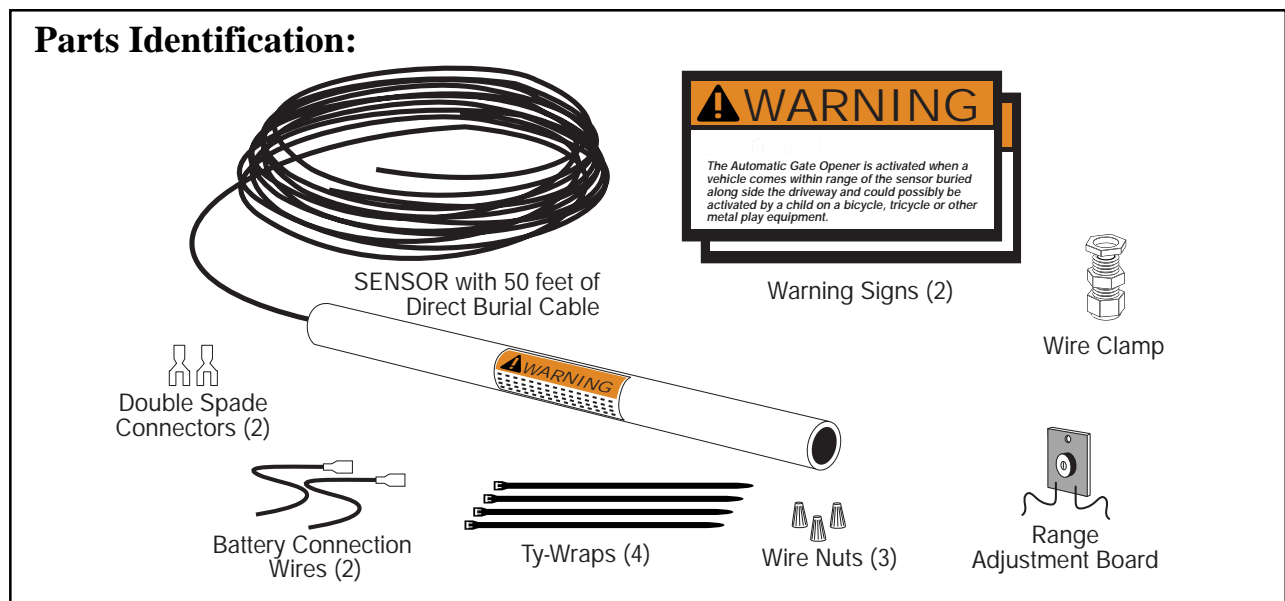

Thank You ...

for purchasing the hands free **GATE OPENING SENSOR**. This product requires no maintenance and will give you years of enjoyment by providing hands free operation of your gate. GTO, Inc., has been designing and manufacturing reliable, high quality products since 1987. Our corporate headquarters and state of the art manufacturing facility is located in Tallahassee, Florida. One of our highest priorities is to provide outstanding technical service to our customers. Therefore, if you have any questions or require any technical assistance, please call our toll free line (800-543-1236) and ask to speak to one of our technicians.

The **GATE OPENING SENSOR** you have purchased is designed with some of the most advanced technology available. In layman's terms, the Sensor detects a change in the earth's magnetic field caused by a mass of metal in motion and automatically opens your gate. The range adjustment potentiometer (POT) that connects to the control box provides you with the ability to increase or decrease the Sensor's sensitivity range.

If a metal object is placed directly above the Sensor (with little motion) it may cause the Sensor to activate, thus opening your gate. For this reason we do not recommend the **GATE OPENING SENSOR** in environments exposed to children.

Prior to installing your Sensor please read the manual thoroughly. There are important safety recommendations of which you should be aware. This product, and any accessory you purchase, should only be installed on a gate opener that meets the current safety standard (UL325). If you have a gate opener that is not listed with the current standards, please contact the GTO sales department for consultation on a gate opener that can meet your specific needs.

Joe Kelley, President of GTO, Inc.

Contents

Before You Start	page 1
Terms and Definitions:	page 1
How the GATE OPENING SENSOR works:	page 1
How the Gate Opening SENSOR's RANGE ADJUSTMENT works: ---	page 1
Placement of the SENSOR :	page 2
Installation Overview:	page 2
Installing the GATE OPENING SENSOR	page 3
Determining SENSOR Location:	page 3
Installing The WIRE CLAMP :	page 3
Wiring the SENSOR to the Mighty Mule Opener :	page 4
Accessory Terminal Connection	page 4
Connecting the Range Adjustment Control Board:	page 5
Power Supply Connection:	page 5
Powering Up the SENSOR :	page 6
Adjusting the Range:	page 6
Safety Precautions:	page 6
Installation on Other Brand Gate Openers	page 7
Technical Specifications	page 8
Trouble Shooting	page 8
Other GTO Products	page 9
Metric Conversion Chart & Warranty	Inside Back Cover

Before You Start ...

Please read the instructions completely before you begin the installation.

Terms and Definitions:

- METAL OBJECT: anything that is made of iron based metal, from a child's toy to a car or truck.
- SENSOR: the magnetic device inside the waterproof tube that detects METAL OBJECTS in motion.
- MAGNETIC FIELD: an area around the SENSOR where metal in motion can be detected.
- MAGNETIC DISTURBANCE: a change in the MAGNETIC FIELD which lets the SENSOR know that it needs to send a signal to the gate opener to open the gate.
- RANGE: the distance from the SENSOR in which a MAGNETIC DISTURBANCE can be detected in the MAGNETIC FIELD.
- RANGE ADJUSTMENT: the RANGE is adjustable from a 3 to 12 foot* radius by tuning the ADJUSTMENT POTENTIOMETER (POT) on the RANGE ADJUSTMENT CONTROL BOARD (shown on page 5). Within this RANGE, the closer you get to the SENSOR, the less metal and motion an object needs to cause a DISTURBANCE in the MAGNETIC FIELD.

CAUTION This principle explains why a child's tricycle, bicycle and other metal play equipment moving close to the SENSOR may have the same DISTURBANCE as a car or truck at a greater distance, and can cause the gate to open.

- WIRE CLAMP: a device which provides a secure and weatherproof opening for the cable from the SENSOR to be brought into a control box (see Parts Identification on cover).
- DOUBLE SPADE CONNECTOR: a wire connector which allows the connection of two wires to be connected to a single terminal (see Parts Identification on cover).

How the GATE OPENING SENSOR works:

- When a metal object such as a car, truck or motorcycle in motion disturbs the MAGNETIC FIELD around the SENSOR, a signal is sent to the automatic gate opener's control board, signaling it to open the gate.
- The metal object must be in motion to disturb the MAGNETIC FIELD, thus activating the gate opener. A stationary vehicle or object will not disturb the MAGNETIC FIELD.


How the GATE OPENING SENSOR's RANGE ADJUSTMENT works:

- The RANGE distance can be adjusted from a 3 to 12 foot* radius from the SENSOR.
- The potentiometer varies the sensitivity range of the SENSOR to avoid unwanted moving metal objects from activating the gate opener, such as: other moving gates; metal play equipment; garage doors; other vehicular traffic; etc.
- With the RANGE adjusted to the maximum of 12 feet*, a large metal object moving slowly will be detected 12 feet* from the SENSOR, while a small metal object moving slowly might not be detected at the same distance. As you move closer toward the SENSOR, the small moving metal object will at some point cause a DISTURBANCE in the MAGNETIC FIELD and activate the gate opener.

* Range distance is approximate and will vary due to outside interference, type of soil, vehicle mass, speed, etc.

Placement of the SENSOR:

- The SENSOR comes with 50 feet of cable. A typical installation will require about 5 feet of cable to come from the ground up and into the control box for connection to the power supply and control board. Check your specific installation for exact dimensions.
- From the point on the ground where you will run the Sensor cable into the control box, lay the cable out on a path as far as you can from the control box. The SENSOR should be no more than 2 feet from the edge of the driveway and no closer than 25 feet from the end of the open gate.
- The SENSOR's RANGE can be adjusted to a maximum of 12 feet*. The movement of a gate in it's open position could cause a DISTURBANCE in the MAGNETIC FIELD of the SENSOR if it comes within the RANGE of the SENSOR. Make sure the end of the open gate is a minimum of 25 feet from the SENSOR. If you have a situation where the SENSOR has to be buried closer than 25 feet you will have to adjust the RANGE of the SENSOR to compensate for the closeness.

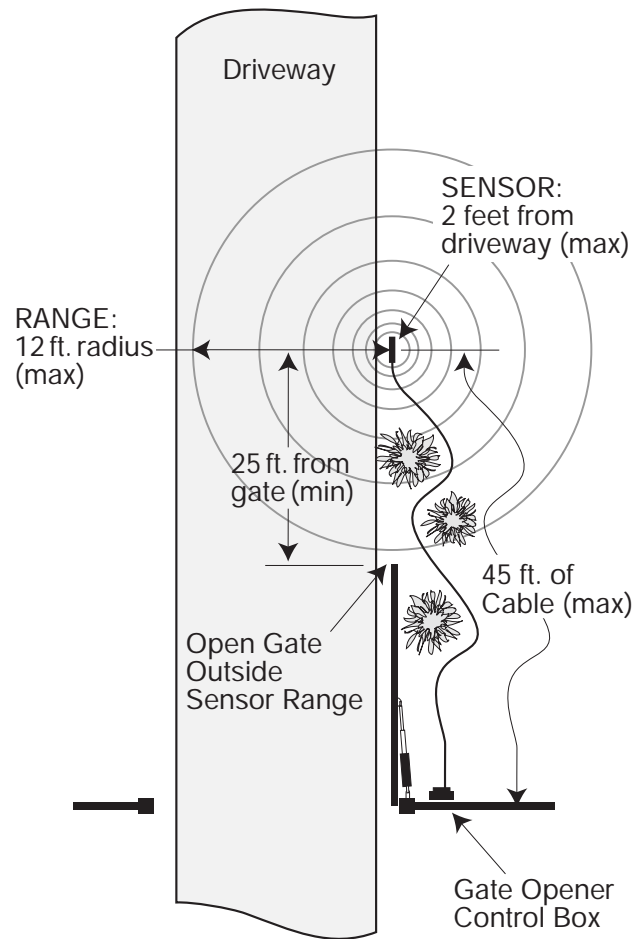

Installation Overview:

- Once the best location for the SENSOR is determined, you are ready to bury the SENSOR and run the cable underground to the control box. Connect the SENSOR wires and the RANGE ADJUSTMENT CONTROL BOARD to the gate opener control board and power supply. Adjust the RANGE if necessary. Finally, place the WARNING signs on the gate. That's it!

For Optimum Performance:

- Locate the SENSOR as far as possible away from power transformers, power lines, under ground gas line, and telephone lines.
- Locate the SENSOR away from general moving traffic to prevent unwanted activation. Remember that the SENSOR detects MAGNETIC DISTURBANCES caused by a vehicle's mass and velocity.
- It is recommended that you run the Sensor cable inside PVC conduit.
- Do not run Sensor cable in conduit with other wires such as power or other control wires.
- The Sensor cable **CAN NOT** be spliced. If you need more wire, contact the GTO Sales Department at 1-800-543-GATE (4283).

* Range distance is approximate and will vary due to outside interference, type of soil, vehicle mass, speed, etc.


Installing the Gate Opening Sensor ...

Determining SENSOR Location:

Step 1: Determine the optimum location for the GATE OPENING SENSOR using the information found in "Placement of the SENSOR" on page 2. Then dig a hole approximately 12 inches deep and 24 inches long within 2 feet and parallel to the edge of the driveway. Next, dig a trench from this hole to a spot under the gate opener control box to run the cable from the SENSOR to the control box.

Keep the SENSOR and the cable uncovered at this time.

We recommend that the cable be run in PVC conduit to the control box to prevent damage to the cable from lawn mowers, weed eaters and grazing animals.

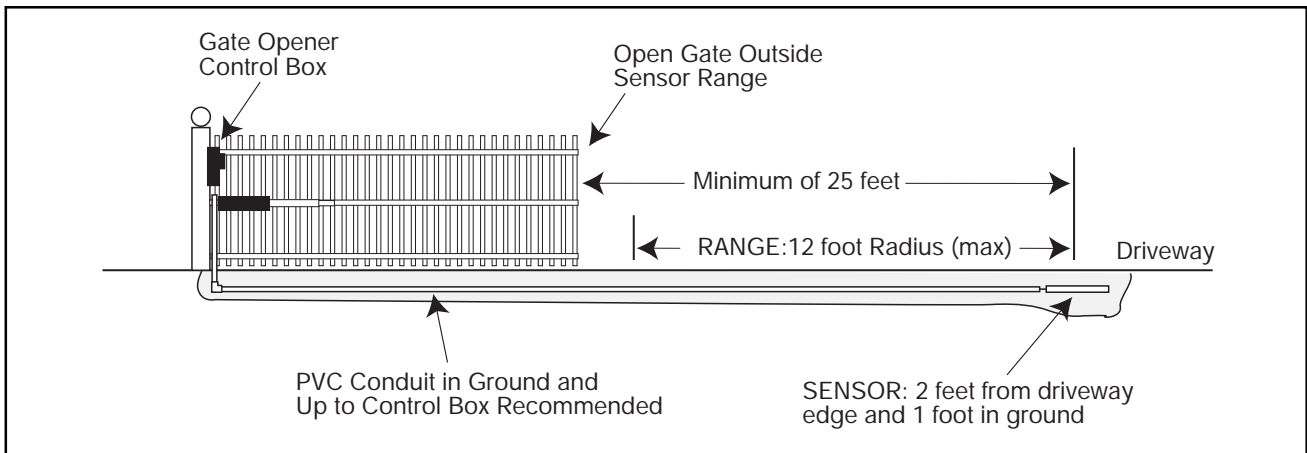



Installing The WIRE CLAMP: The WIRE CLAMP (included) is used to secure the Sensor cable where it enters the control box to prevent it from being accidentally pulled out.

Step 2: If you are installing the SENSOR on a Mighty Mule single gate opener, use a screwdriver or steel punch to carefully remove the thin plastic knockout disk (see illustration at right) at the bottom of the control box. If you have a dual gate opener system, drill a 7/8" diameter hole at the bottom of the control box and install the WIRE CLAMP.

Step 3: Use a sharp knife or deburring tool to clean the rough edges from the hole.

Be careful with tools to avoid contact or damage to the control board!

Step 4: Unscrew and remove the lock nut from the WIRE CLAMP hub (included with hardware). From the outside of the control box, insert the WIRE CLAMP hub and sealing nut (see illustration right) into the new WIRE CLAMP hole. Finger tighten the lock nut onto the threaded end of the WIRE CLAMP hub from inside the box.

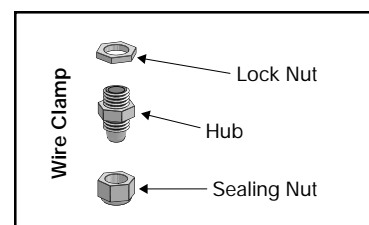
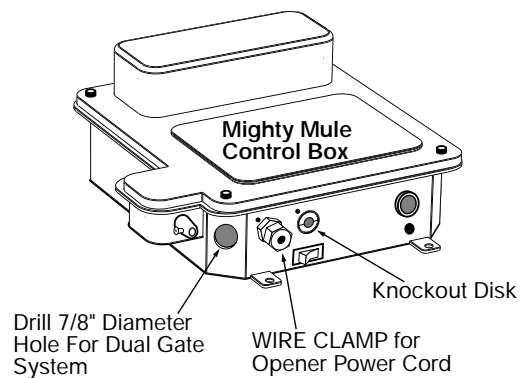


Wiring the SENSOR to the Mighty Mule Gate Opener:

IMPORTANT: TURN OFF the power and disconnect the battery wires before you begin to connect the SENSOR wires to any gate opener.

Step 5: Run the cable from the SENSOR through the WIRE CLAMP into the control box. Pull about 8 - 10 inches of cable into the control box to reach the ACCESSORY TERMINAL BLOCK and BATTERY WIRES in the control board. Now tighten the WIRE CLAMP nut to secure the cable in the WIRE CLAMP.

Step 6: Strip about 3/8 of an inch of insulation from the YELLOW, BLACK, RED and BLUE wires in the SENSOR CABLE.

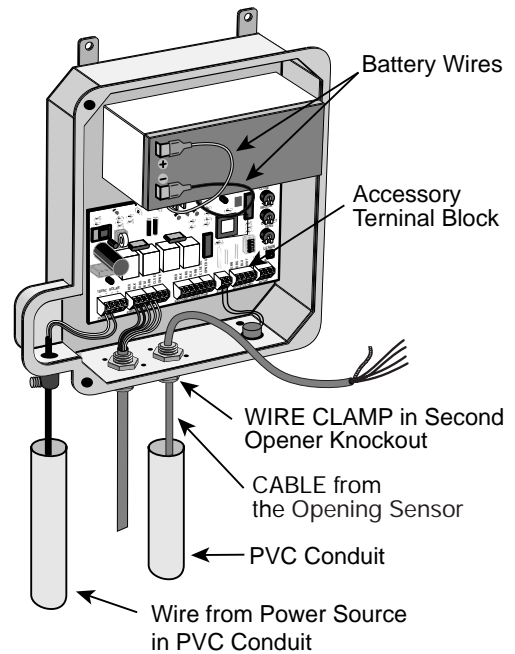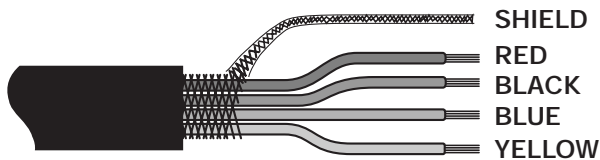


NOTE: The SHIELD is the braided metal wire wrapped around the insulated leads inside the SENSOR CABLE.

Accessory terminal connection:

Step 7: Connect the BLUE wire from the SENSOR CABLE to the BLU Accessory Terminal on the opener control board.


Step 8: Connect the BLACK wire from the SENSOR CABLE to the GRN Accessory Terminal on the opener control board.

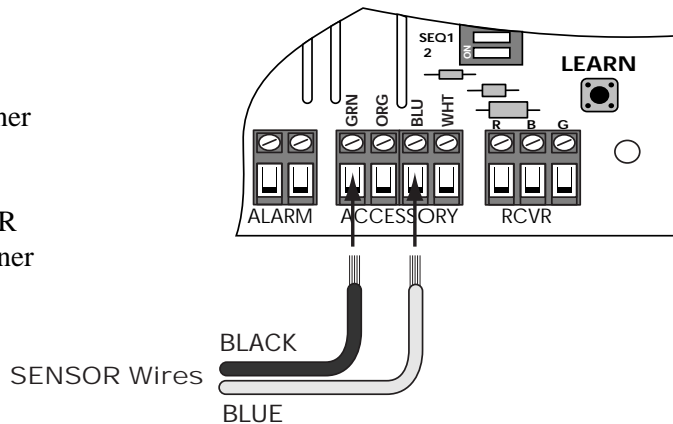

Connecting the Range Adjustment Control Board:

Step 9: Connect the YELLOW wire from the SENSOR CABLE to the YELLOW wire from the Range Adjustment control board using one of the WIRE NUTS provided.

Step 10: Connect the BLACK wire from the Range Adjustment control board to the BLACK BATTERY CONNECTOR wire (provided), along with the SHIELD wire from the SENSOR CABLE (see Step 13 below).

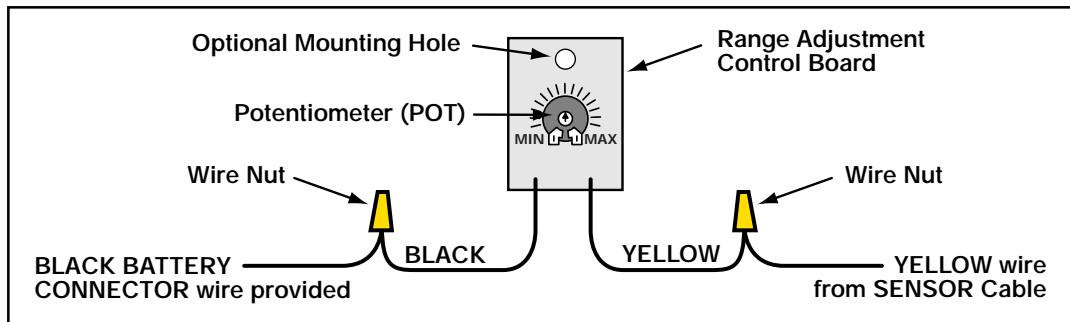

Step 11: Secure the RANGE ADJUSTMENT CONTROL BOARD inside the gate opener control box. The control box has a slot on the side and bottom for extra control boards, or you can use the optional mounting hole.

IMPORTANT: DO NOT let exposed wiring or components on the control board make contact with other exposed wiring or components.


Power supply connection:

Step 12: Connect the RED and BLACK control board wires from the opener to the DOUBLE SPADE CONNECTORS (provided) as shown.

Step 13: Using a WIRE NUT, connect the SHIELD wire from the SENSOR CABLE (along with the BLACK wire from the Range Adjustment board) to the BLACK BATTERY CONNECTION wire provided. Using the remaining WIRE NUT connect the RED wire from the SENSOR CABLE to the RED BATTERY CONNECTION wire provided.

Step 14: Connect these wires to the DOUBLE SPADE CONNECTORS as shown.

IMPORTANT: Be sure to connect both RED leads to the **same** DOUBLE SPADE CONNECTOR and both BLACK leads to the **other** DOUBLE SPADE CONNECTOR. **You will connect the DOUBLE SPADE CONNECTORS to the battery in the next step.**


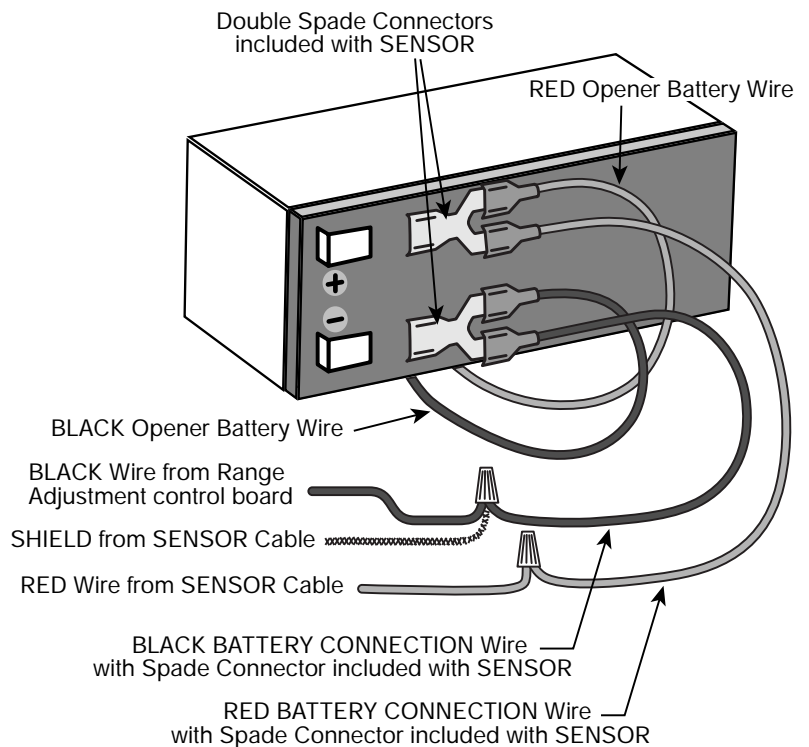


Powering Up the SENSOR:

IMPORTANT: When the SENSOR is first powered up it must be undisturbed for 60 seconds to perform the self test and calibrations. Before powering the SENSOR make sure there are no moving metal objects or moving vehicles within range of the SENSOR.

Step 15: Connect the DOUBLE SPADE CONNECTORS to the battery terminals (RED WIRES to POSITIVE (+) battery terminal and BLACK WIRES to NEGATIVE (-) battery terminal). Wait 60 seconds. Turn the opener on and test the SENSOR.

NOTE: If you have other accessories connected to your battery with double spade connectors you may need to connect a double spade connector to a double spade connector in order to connect all the accessories.

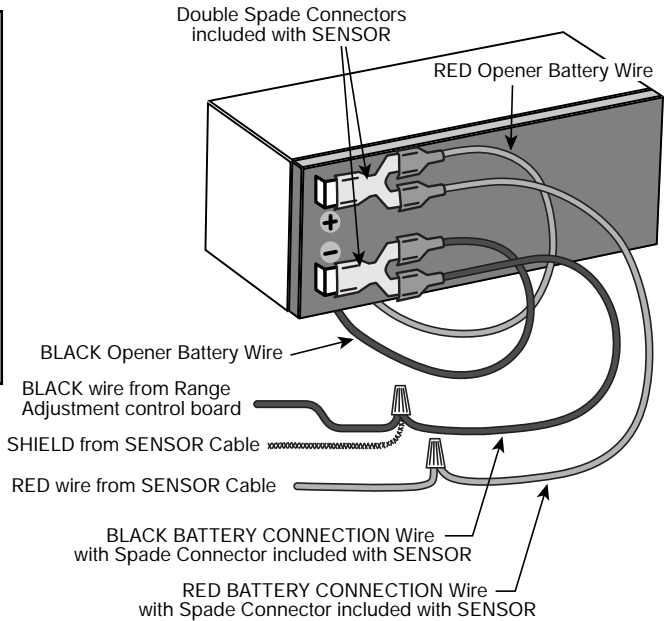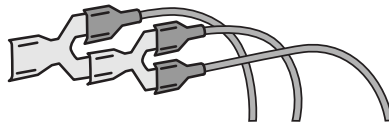


Adjusting the Range:

Step 16: Test the SENSOR to see if it is working properly and if the RANGE needs adjusting for optimum performance.


- Turn the potentiometer (POT) clockwise to increase range.
- Turn the potentiometer (POT) counter-clockwise to decrease range.

Replace the control box cover and cover the SENSOR and cable.

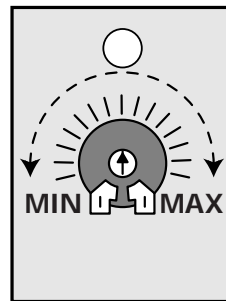

Safety Precautions:

Step 17: Place the WARNING SIGNS on both sides of the gate using Tywraps included.

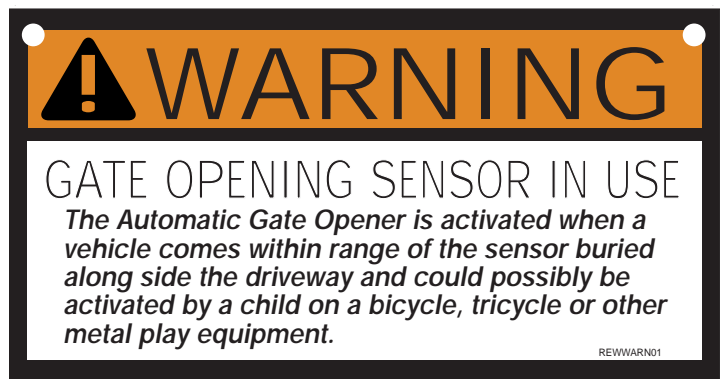

For Installation on Other Brand Gate Openers ...

If you are using the GATE OPENING SENSOR on any other automatic gate opener brand, use the information below for wiring the system. If you do not understand the instructions below, please call GTO's Technical Support at 1-800-543-1236.

Typical Gate Wiring Connection:

• Reference Leads:

- RED => Input Voltage (+)
- SHIELD => Ground/Common (-)
- BLACK => Relay's Common
- BLUE => Relay's Normally Open
- YELLOW => Remote SENSOR [Range adjustment potentiometer (POT)]

• Terminology Definitions:

- 'FREE EXIT/ENTRY' is defined as input terminals (2) that upon activation (momentarily connected together) will cause the gate to run in the open direction only. Note: In most gate openers, one of the two terminals is the 'COMMON/GND'.

• Power supply connection:


- DC power supply: (11-36 Vdc)
 - Connect the positive (+) lead of the power supply to the RED wire.
 - Connect the negative (-) lead of the power supply to the SHIELD wire.
- AC power supply: (8-26 Vac)
 - Connect the power supply to the RED & SHIELD wires. There is no polarity for AC power supply.

• Relay output connection:

- Connect the BLUE wire from the SENSOR to the 'FREE EXIT/ENTRY' of the gate opener.
- Connect the BLACK wire from the SENSOR to the 'COMMON/GND' of the gate opener.

• Range (POT) board connection:

- Connect the YELLOW wire from the SENSOR to the YELLOW wire from the Range Adjustment Board.
- Connect the BLACK wire from the Range Adjustment Board to a negative input voltage.
- Turn the POT clockwise to increase range.
- Turn the POT counter-clockwise to decrease range.

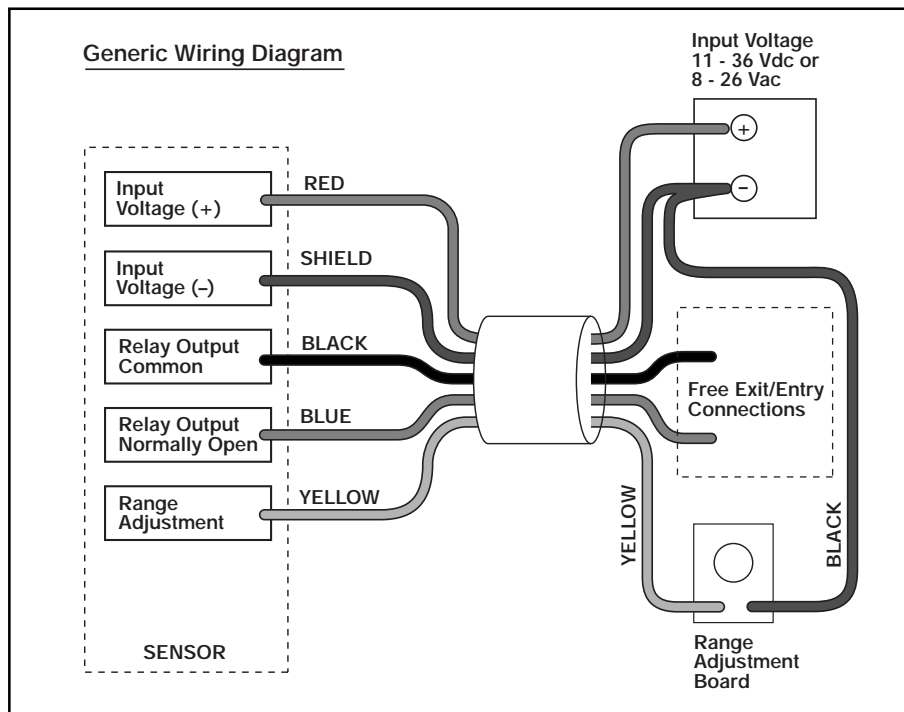

TECHNICAL SPECIFICATIONS:

- Power supply: 8-26 Vac/dc.
- Current consumption: 1.5 mA typical.
- Relay rating: Latching relay

Nominal switching capacity (resistive load)	1 Amp 30 Vdc, 0.5 Amp 125 Vac
Max. switching power (resistive load)	30 Watt, 62.5 V A
Max. switching voltage	110 Vdc, 125 Vac
Max. switching current	1 Amp


- Relay Trip Time: 2 seconds
- Operating Temperature: -25°F (-14°C) to 125°F (69°C)
- Dimensions: 1-3/4" (44.5 mm) diameter x 16.5" (42 cm) long.
- Adjustable range: 3 -12 feet typical installation.
- Very low power consumption, ideal for battery application.

Trouble Shooting: Make sure all connections are correct.

If the SENSOR is not working:

1. Make sure the Range Adjustment is set at maximum range.
2. Disconnect the power (battery) to the SENSOR.
3. Reconnect the power to the SENSOR and make sure that no metal object or vehicle is moving around the SENSOR for 60 seconds while it is calibrating.
4. Test the SENSOR to verify that it is working properly.

Other GTO Products for Your Safety and Convenience:

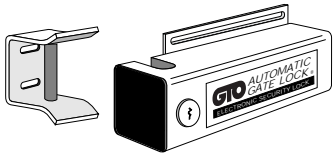


Automatic Gate Lock (FM143)

A **MUST** for securing the gate against forced entry or exit. Solenoid driven, plated steel bolt lock with a zinc plated steel housing. The horizontal electronic lock is used with the **Mighty Mule** system for maximum stability and security. Recommended for gates over 8 feet long or where high winds are common.




GTO Digital Keypad (FM137)

The specially designed digital keypad can be easily installed as a wireless or wired keypad. It can be programmed to use up to fifteen different personal identification number (PIN) codes. Each code is face programmable with additional security features built in. Requires 3 AA batteries (*not included*).

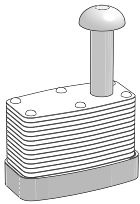

Pin Lock (FM133)

The pin lock substitutes for the clevis pin at either or both mounting points of the opener. Helps prevent theft of the opener from the gate, while allowing quick release of the opener.

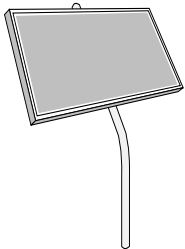

5 Watt Solar Panel (FM121)

The **Solar Panel** is a solar powered battery charger for use with the **Mighty Mule** gate opener system. Particularly suited for remote installations, the **Solar Panel** comes with tubular steel support, mounting clips, wire connectors, and 8 ft. of low voltage wire. The **Mighty Mule** control board has clearly labeled terminal connections for easy installation of the **Solar Panel**. Installation in some regions of the world may require dual solar panels for adequate charging power.



Entry Transmitter (FM135)

The **GTO** entry transmitter, with adjustable code settings, is standard equipment with **Mighty Mule** systems. Battery included.



Key Chain Mini Transmitter (FM134)

The Key Chain Mini Transmitter is a miniature version of the entry transmitter and has the same adjustable code settings. Battery included.



Push Button (Doorbell) Control (FM132)

Unlighted doorbell button for remote entry or exit control. Connects directly to the control board and uses 16 gauge, multi-stranded low voltage wire (*not included*).

For your nearest dealer, please call 1-800-543-GATE (4283)

Conversion Chart

Converting Metric Units to English Equivalents

When You Know	Multiply By	To Find	Symbol
centimeters	0.3937	inches	in. (or ")
meters	3.2808	feet	ft. (or')
kilograms	2.2046	pounds	lb. (or #)

Converting English Units to Metric Equivalents

When You Know	Multiply By	To Find	Symbol
inches	2.5400	centimeters	cm
feet	0.3048	meters	m
pounds	0.4535	kilograms	kg

Converting Temperature

deg. Celsius	$(^{\circ}\text{C} \times 1.8) + 32$	deg. Fahrenheit	$^{\circ}\text{F}$
deg. Fahrenheit	$(^{\circ}\text{F} - 32) \div 1.8$	deg. Celsius	$^{\circ}\text{C}$



This product and any accessory you purchase should only be installed on a gate opener that meets the current safety standard, UL325, 4th Edition. If you have a gate opener that is not listed with the current standard please contact the GTO sales department for consultation on a gate opener that can meet your specific needs.

GTO Limited One Year Warranty:

GTO, Inc., gate openers and accessories are warranted by the manufacturer against defects in materials and manufacturer workmanship for a period of one (1) year from date of purchase, ***provided the recommended installation procedures have been followed.***

In the case of product failure due to defective material or manufacturer workmanship within the one (1) year warranty period, the product will be repaired or replaced (at the manufacturer's option) at no charge to the customer, if returned freight prepaid to GTO, Inc., 3121 Hartsfield Road, Tallahassee, Florida, USA 32303. **IMPORTANT: Call (850) 575-4144 or Fax (850) 575-8950 for a Return Goods Authorization (RGA) number before returning accessory to factory.** Products received at the factory without an RGA number will not be accepted. Replacement or repaired parts are covered by this warranty for the *remainder* of the one (1) year warranty period or six (6) months, whichever is greater. GTO, Inc. will pay the shipping charges (equal to United Parcel Service GROUND rate) for return to the owner of items repaired under warranty.

The manufacturer will not be responsible for any charges or damages incurred in the removal of the defective parts for repair, or for the reinstallation of those parts after repair. This warranty shall be considered void if damage to the product(s) was due to improper installation or use, connection to an improper power source, or if damage was caused by lightning, wind, fire, flood, insects or other natural agent.

After the one (1) year warranty period, GTO, Inc. will make any necessary repairs for a nominal fee. Call GTO at (800) 543-1236 for more information. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. This warranty is in lieu of all other warranties, expressed or implied. **NOTE: Verification of the warranty period requires copies of receipts or other proof of purchase. Please retain these records.**